

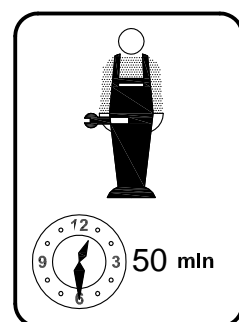









70x140cm Bed

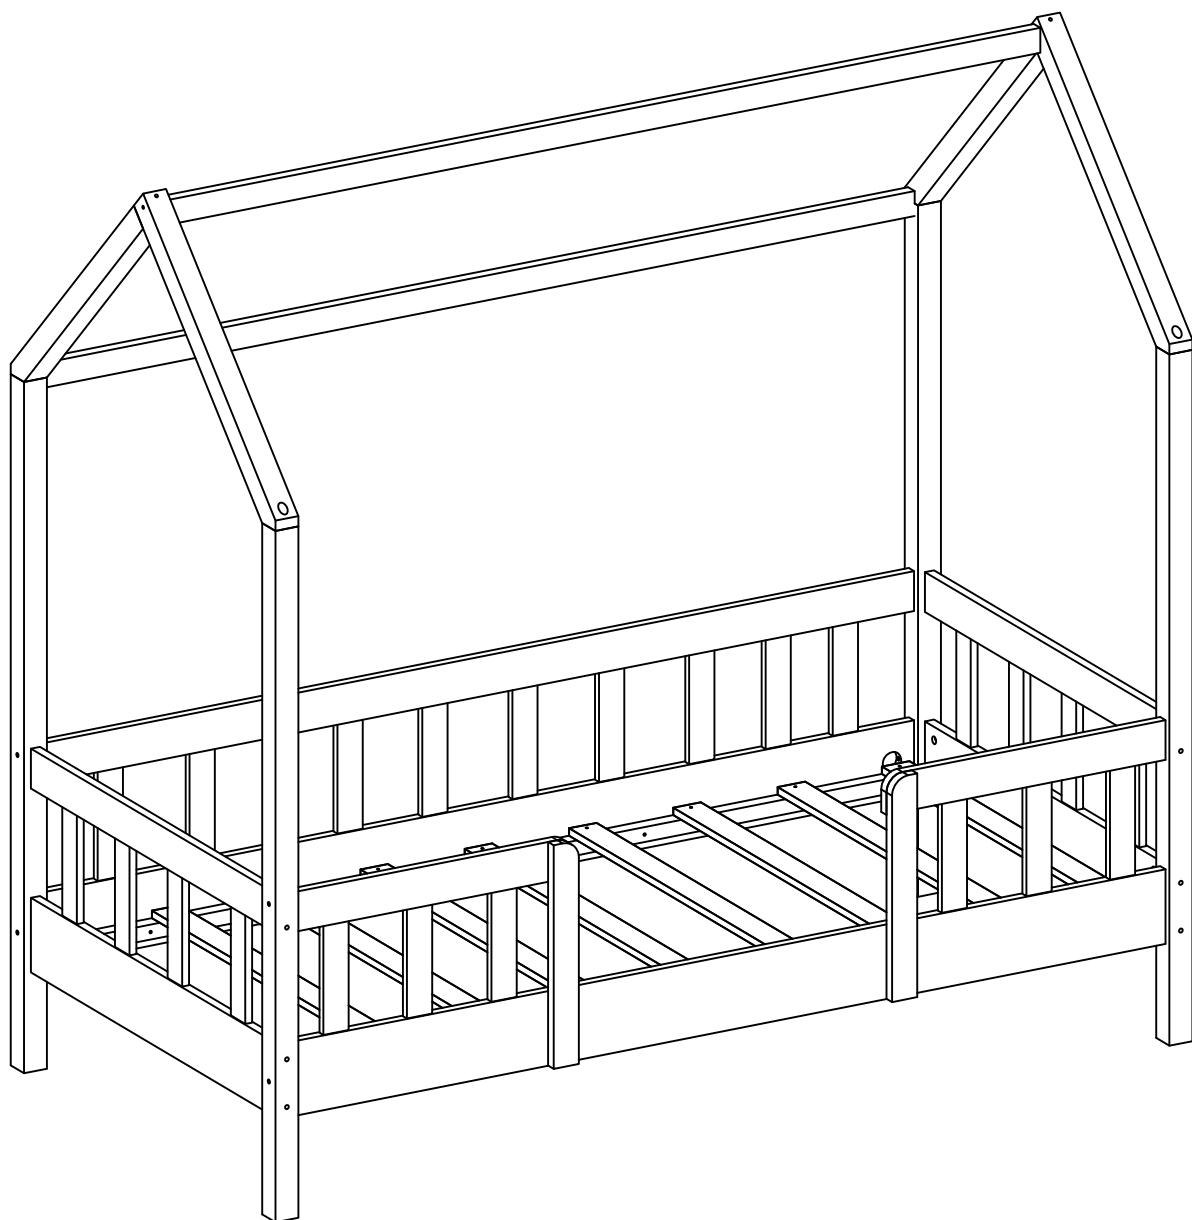



EXPLODED VIEW

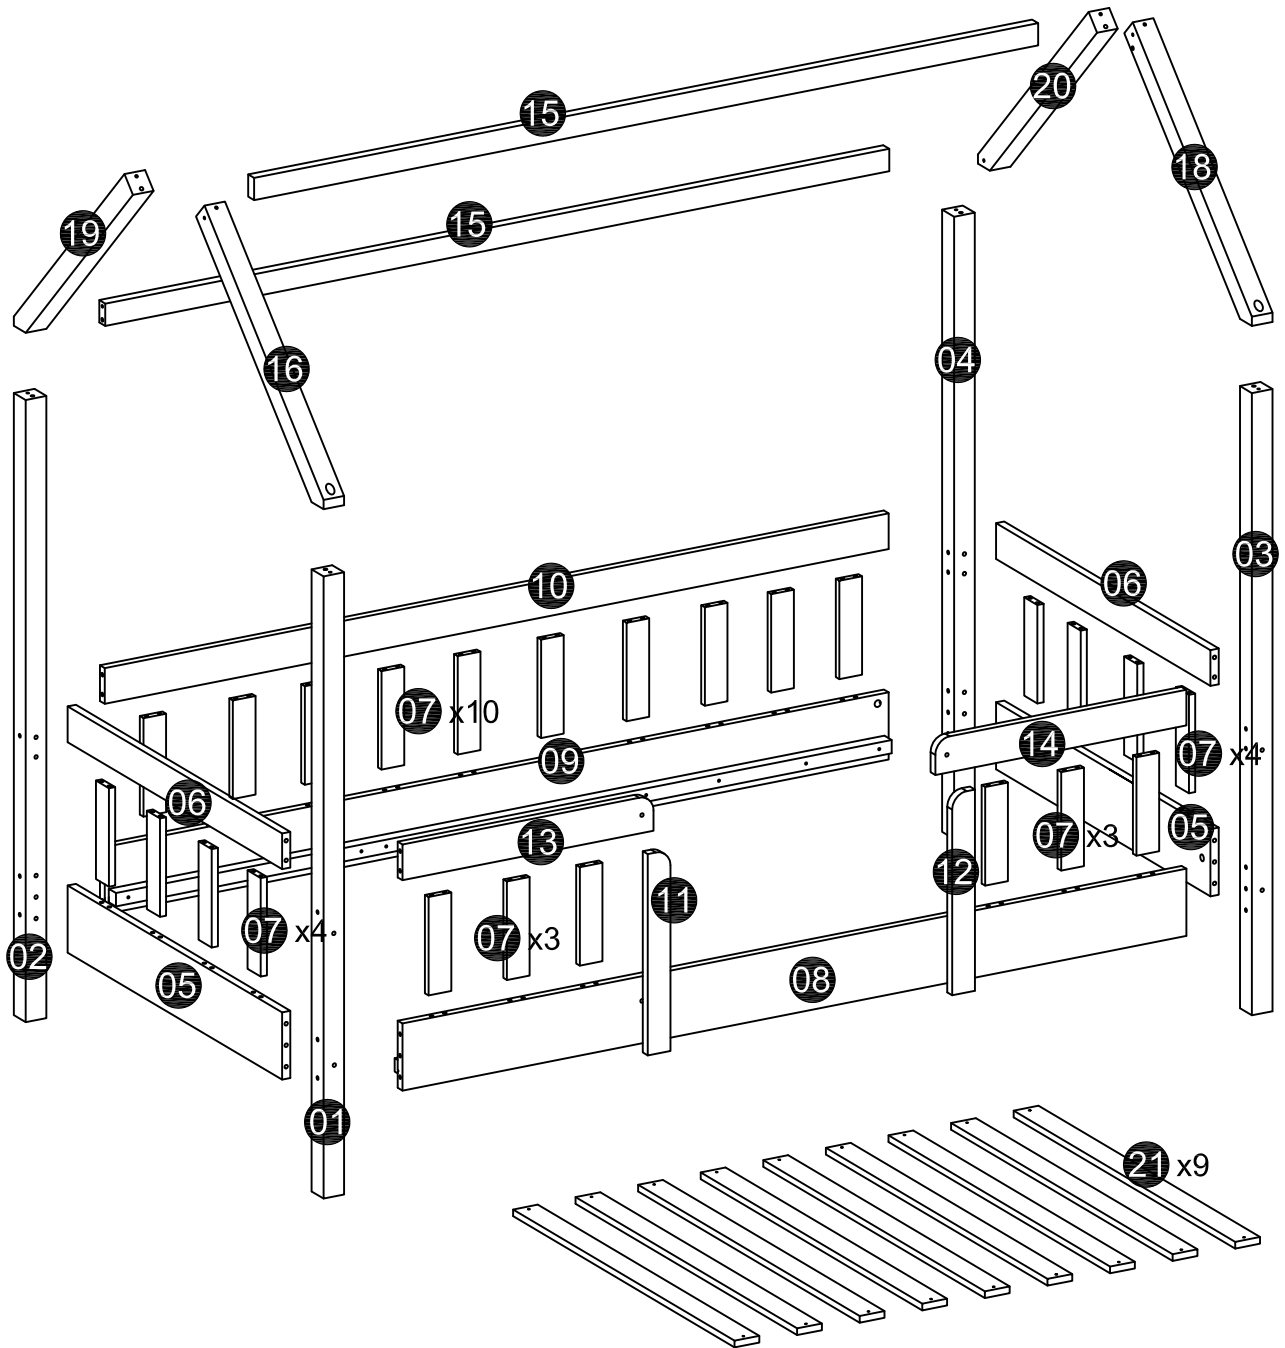

HARDWARE


<p>A x12</p>  <p>M6 x90mm</p>	<p>B x12</p>  <p>Ø6 x90mm</p>	<p>C x14</p>  <p>M6 x30mm</p>	<p>D x4</p>  <p>Ø6 x80mm</p>		
<p>F x18</p>  <p>Ø4 x30mm</p>	<p>G x126</p>  <p>Ø8 x30mm</p>	<p>H x1</p> 			

TOOLS




Ruler - Use this ruler to help correctly identify the screws


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170



01

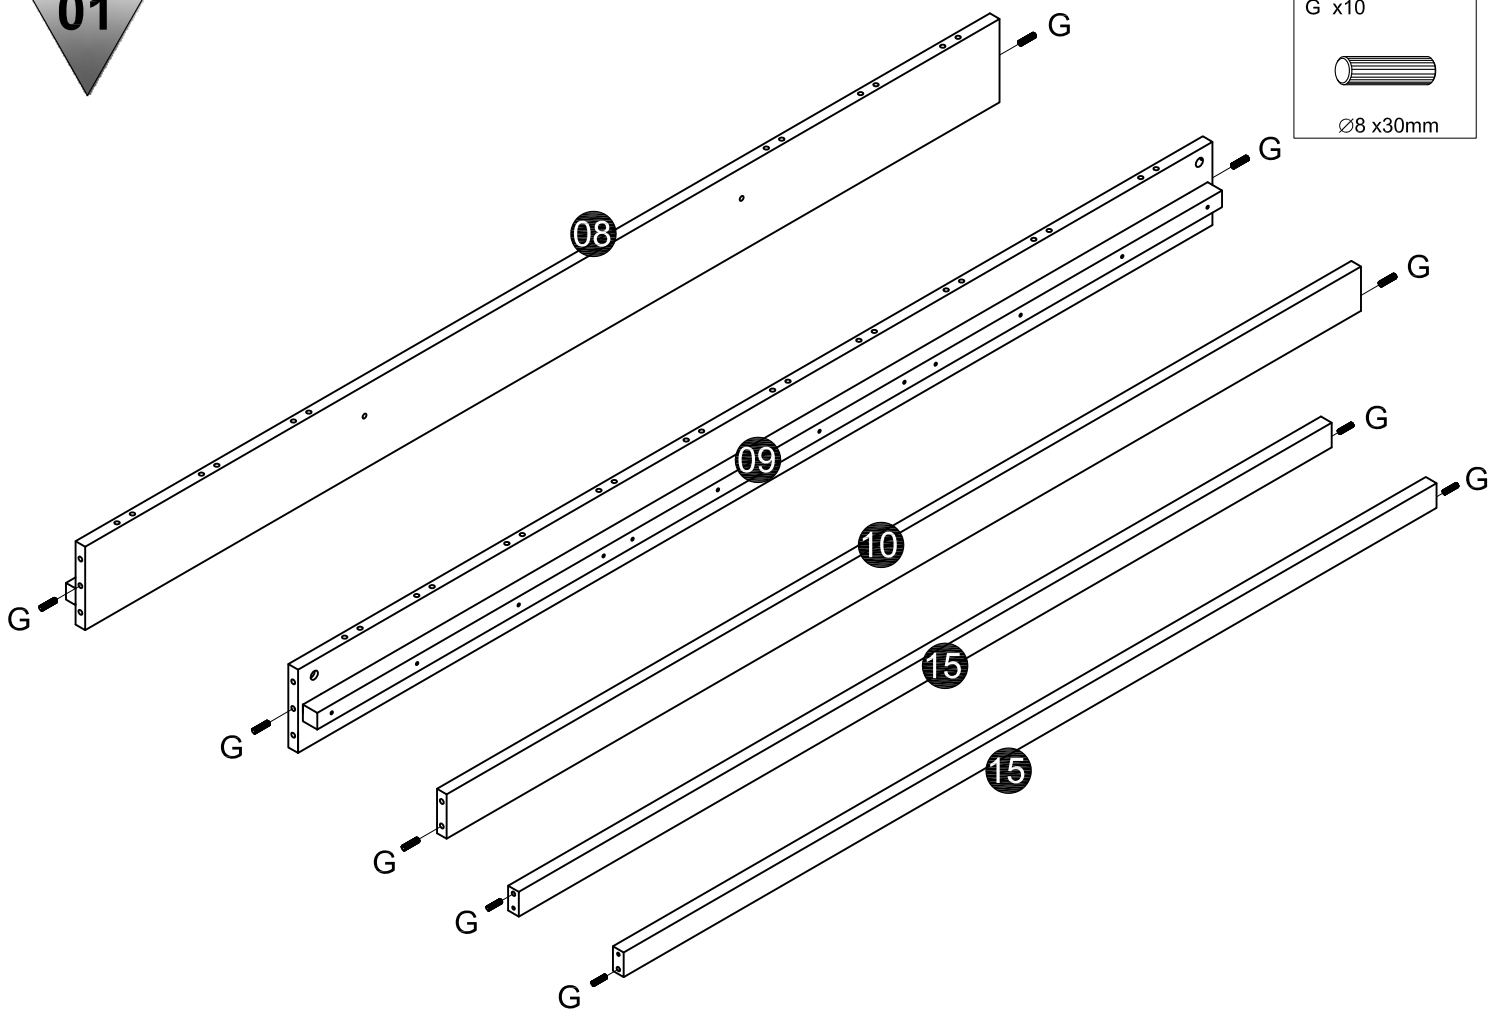

02


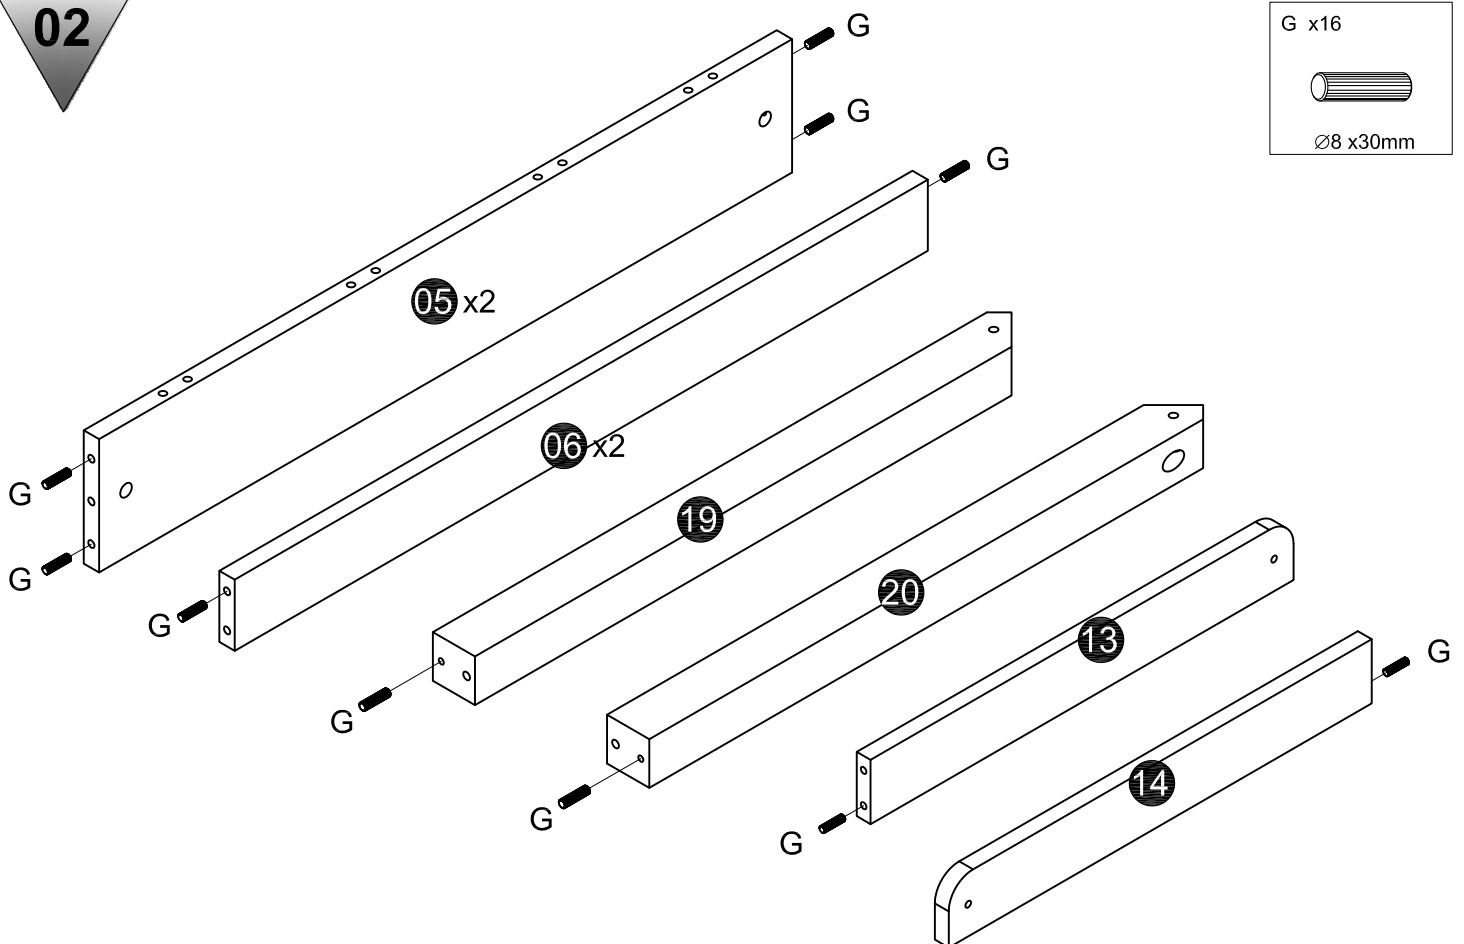


03

G x40



Ø8 x30mm

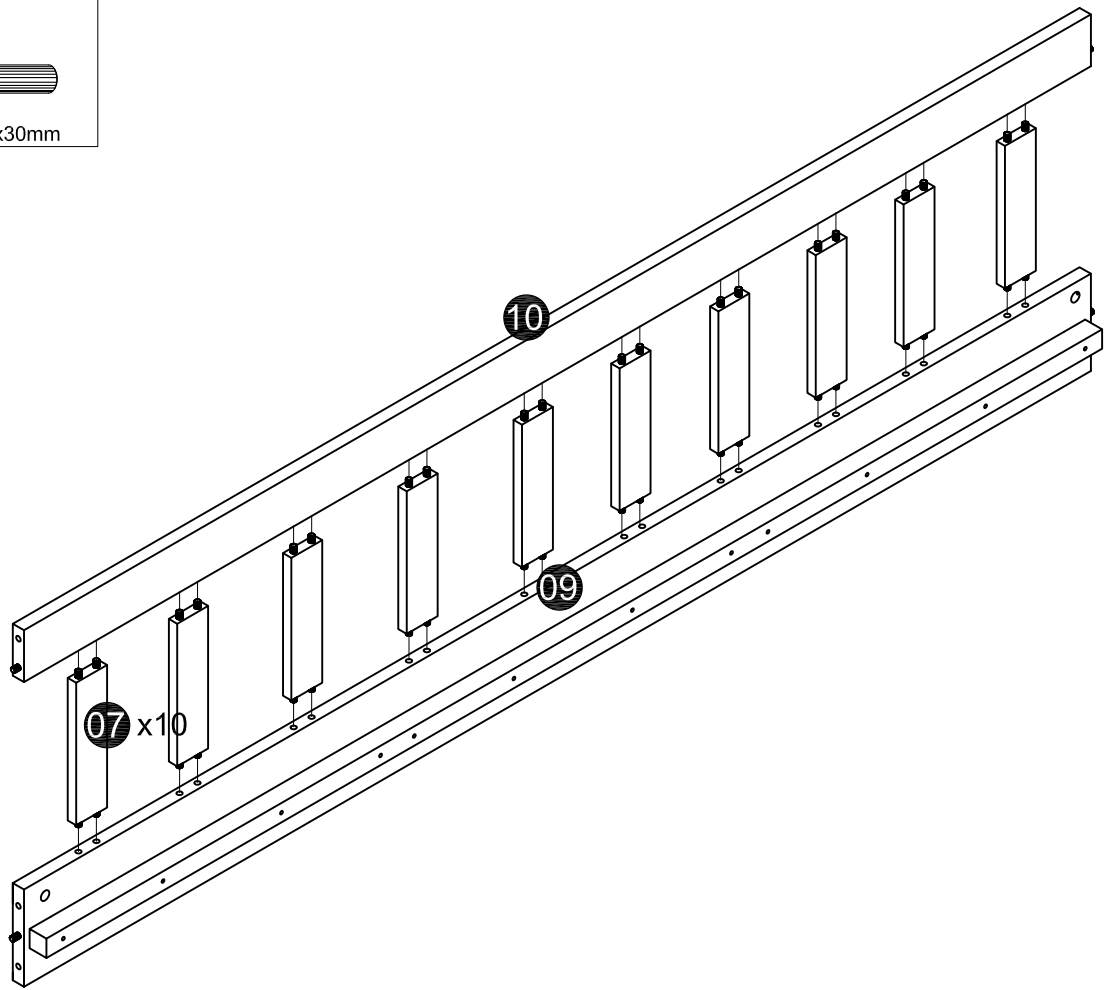
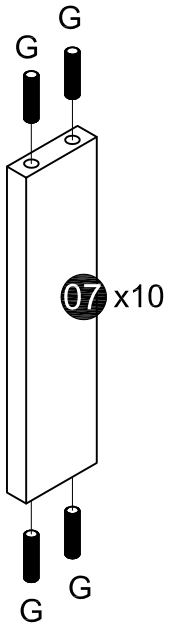


04



G x56

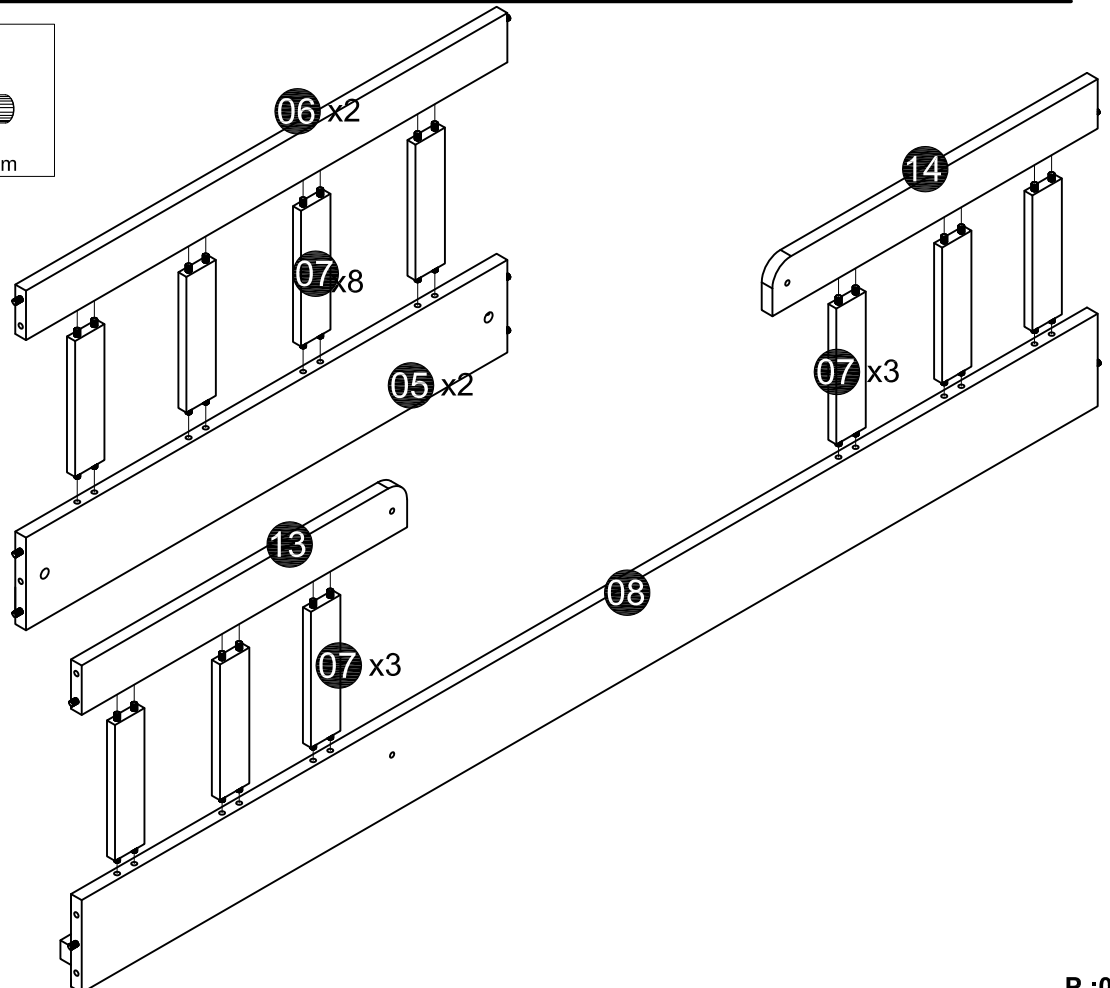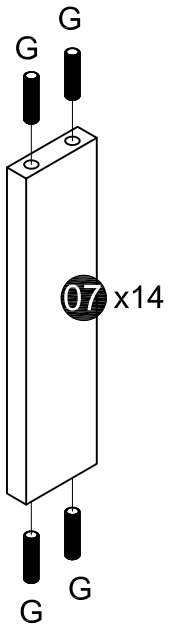


Ø8 x30mm






05

D x4	H x1
	
M6 x30mm	

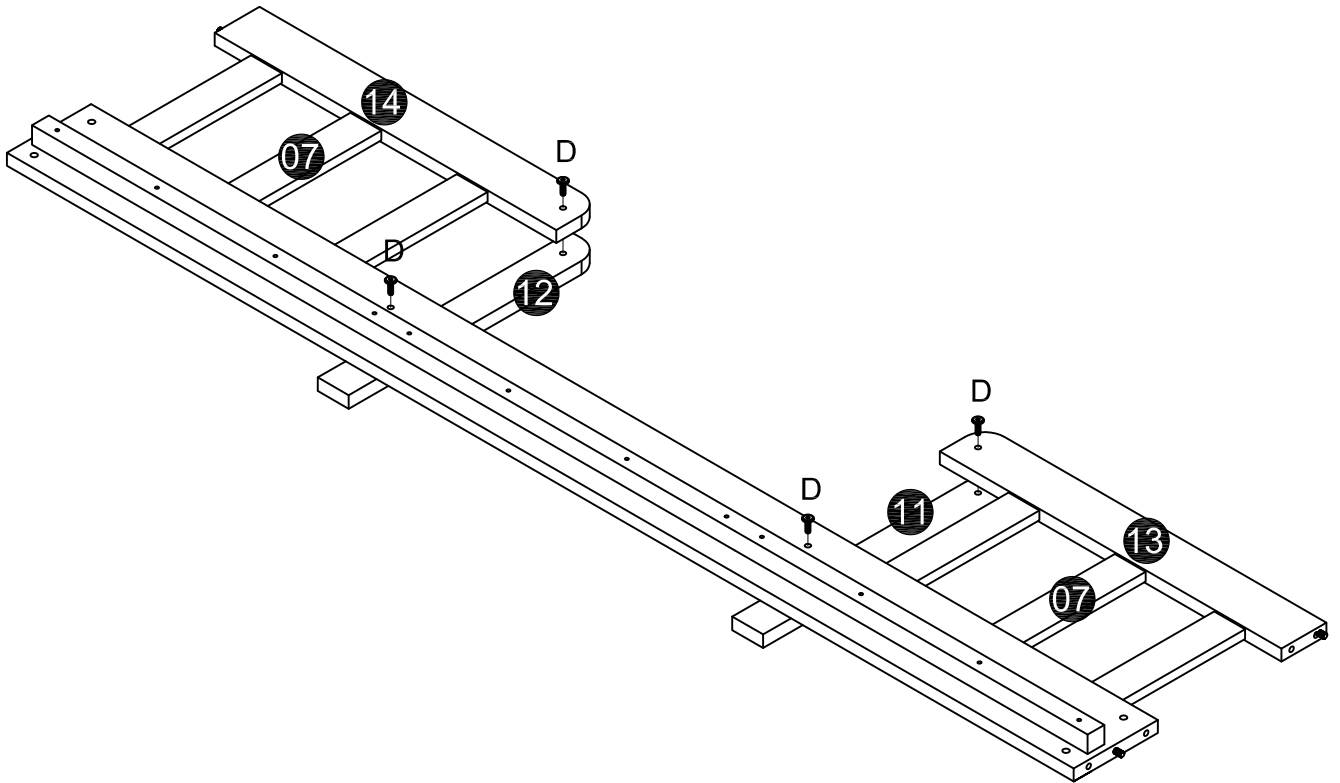



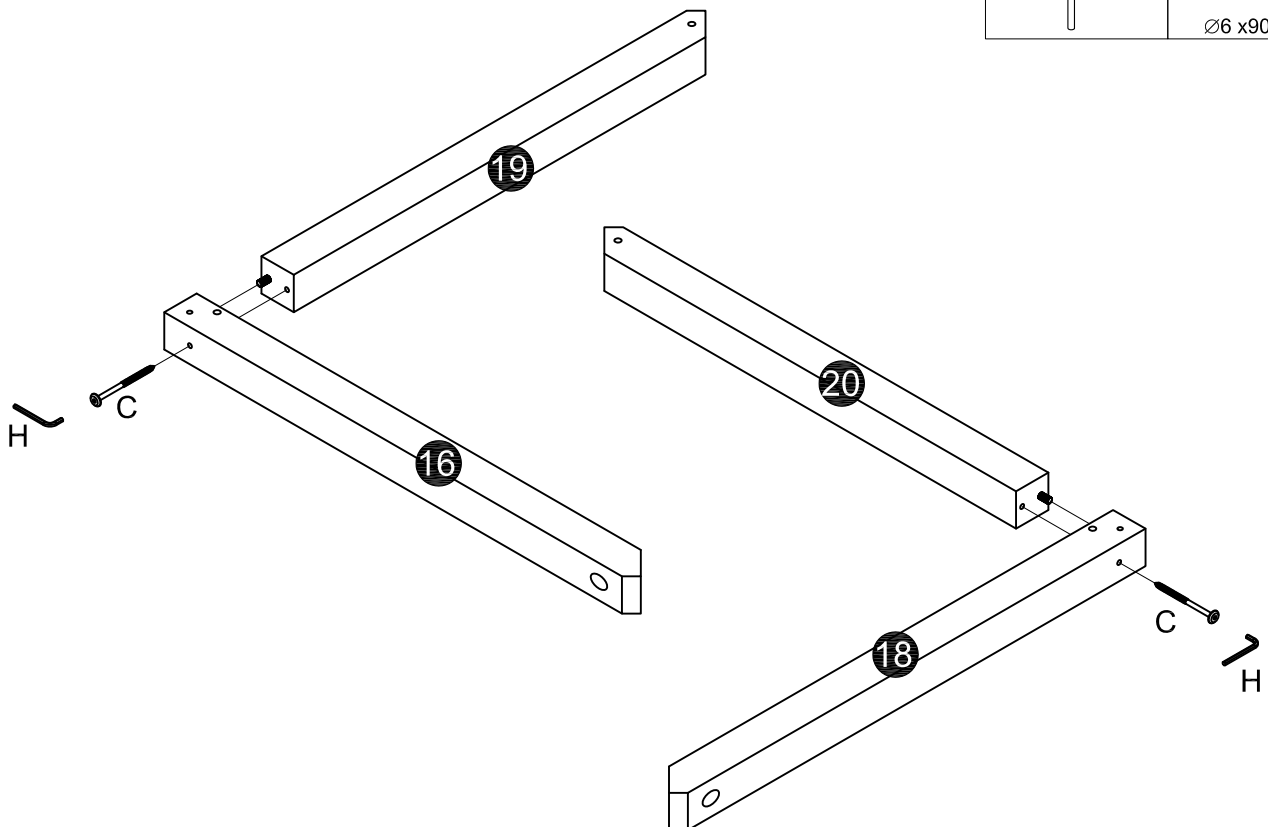


06

H x1	C x2
	
	∅6 x90mm








07

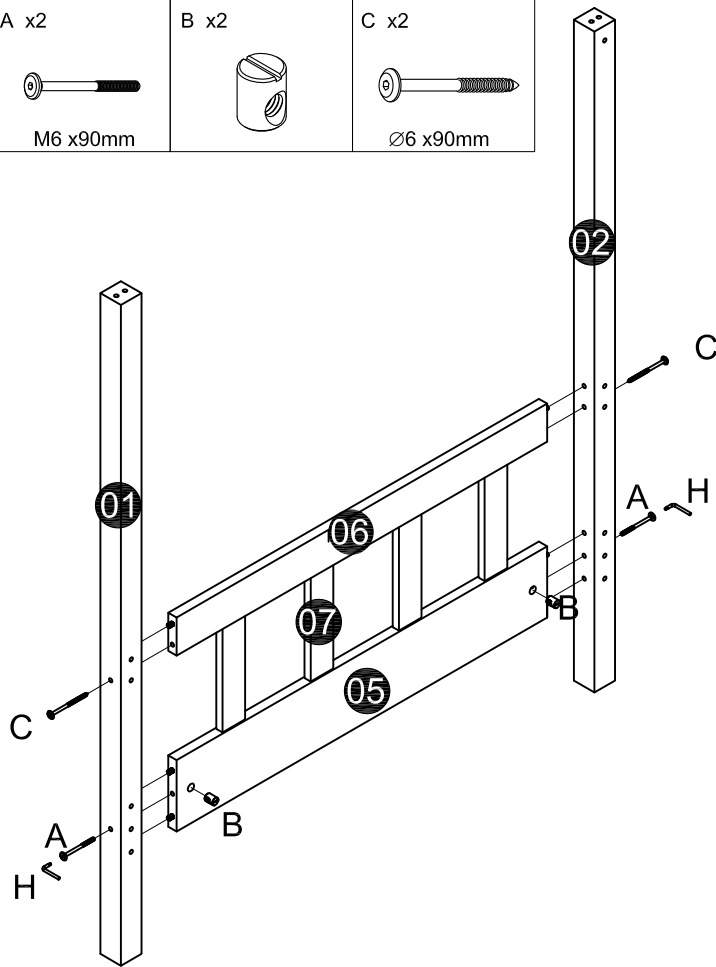H x1 	A x2  M6 x90mm	B x2 	C x2  Ø6 x90mm
---	---	---	---




08


H x1 	A x2  M6 x90mm	B x2 	C x2  Ø6 x90mm
---	---	---	---

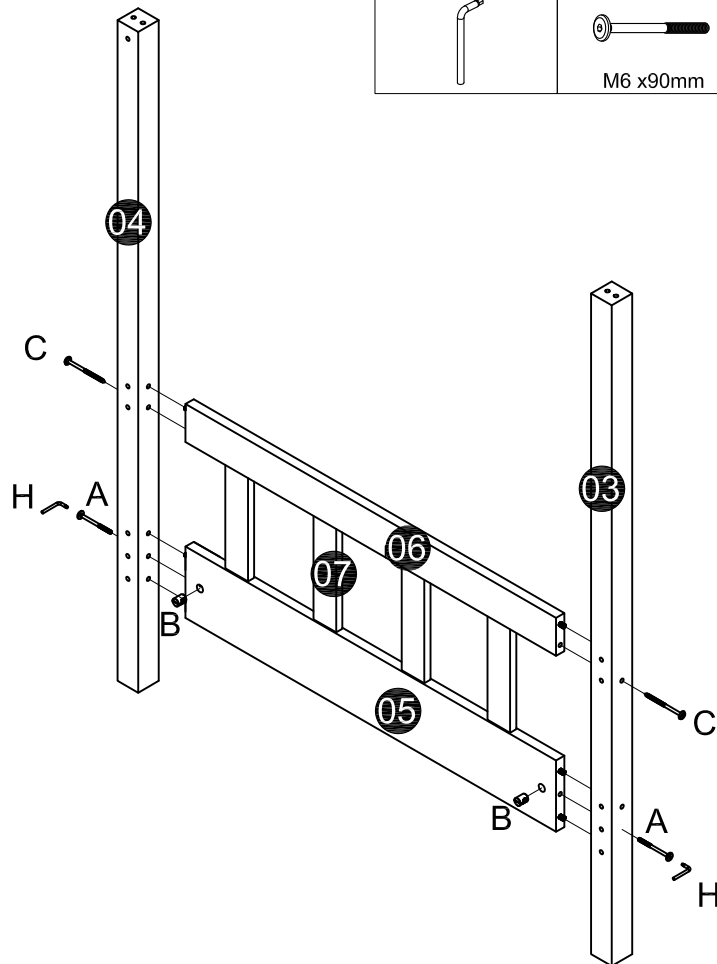



09

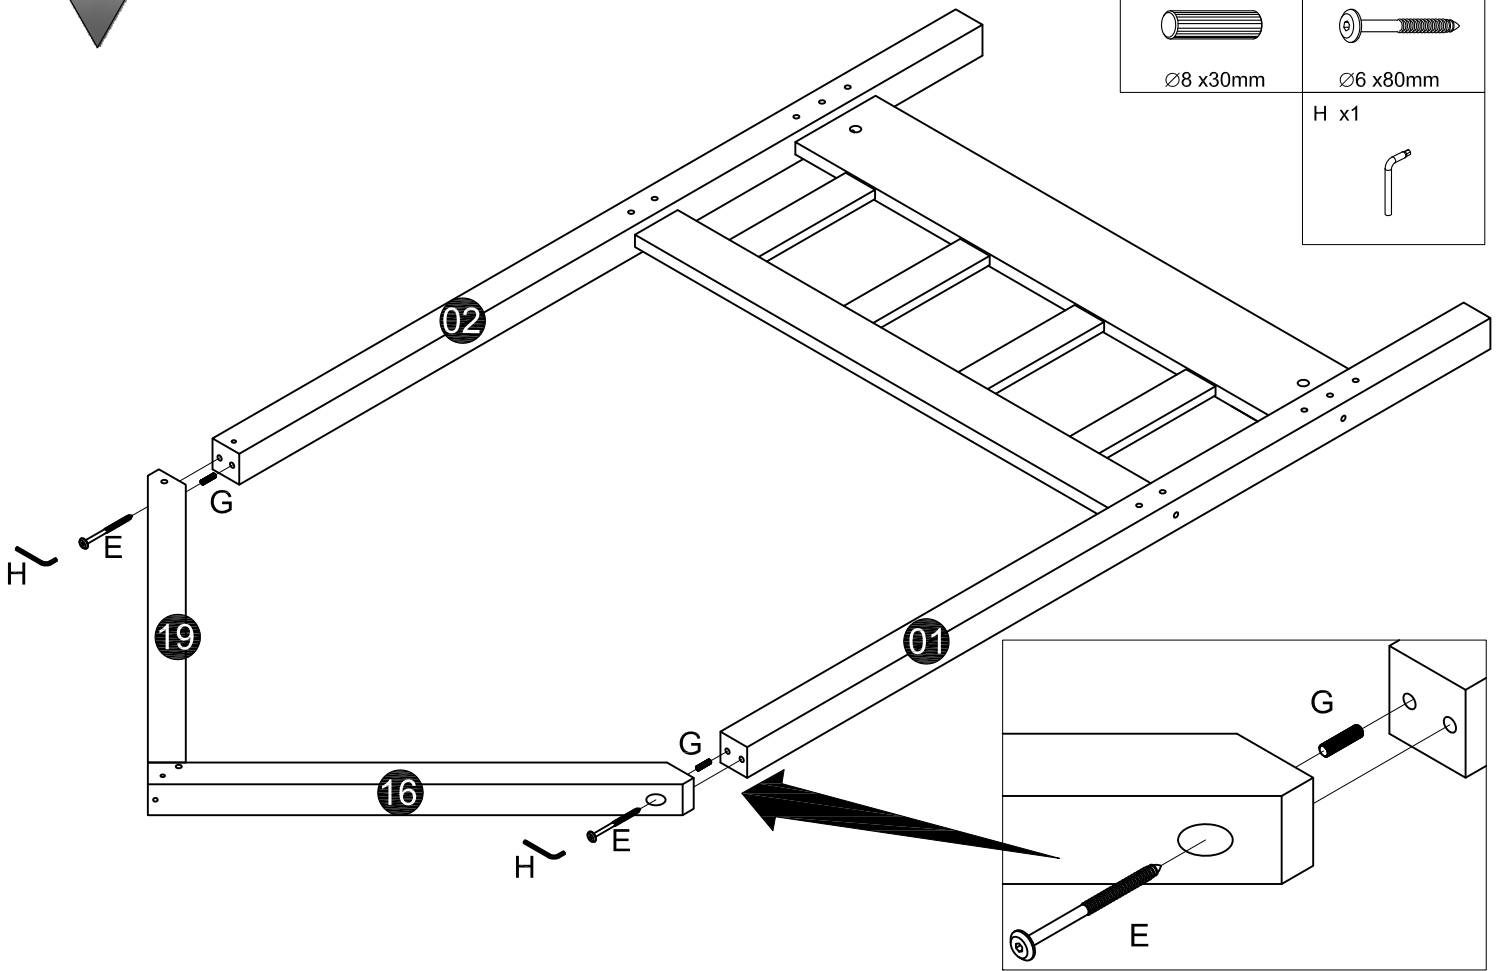


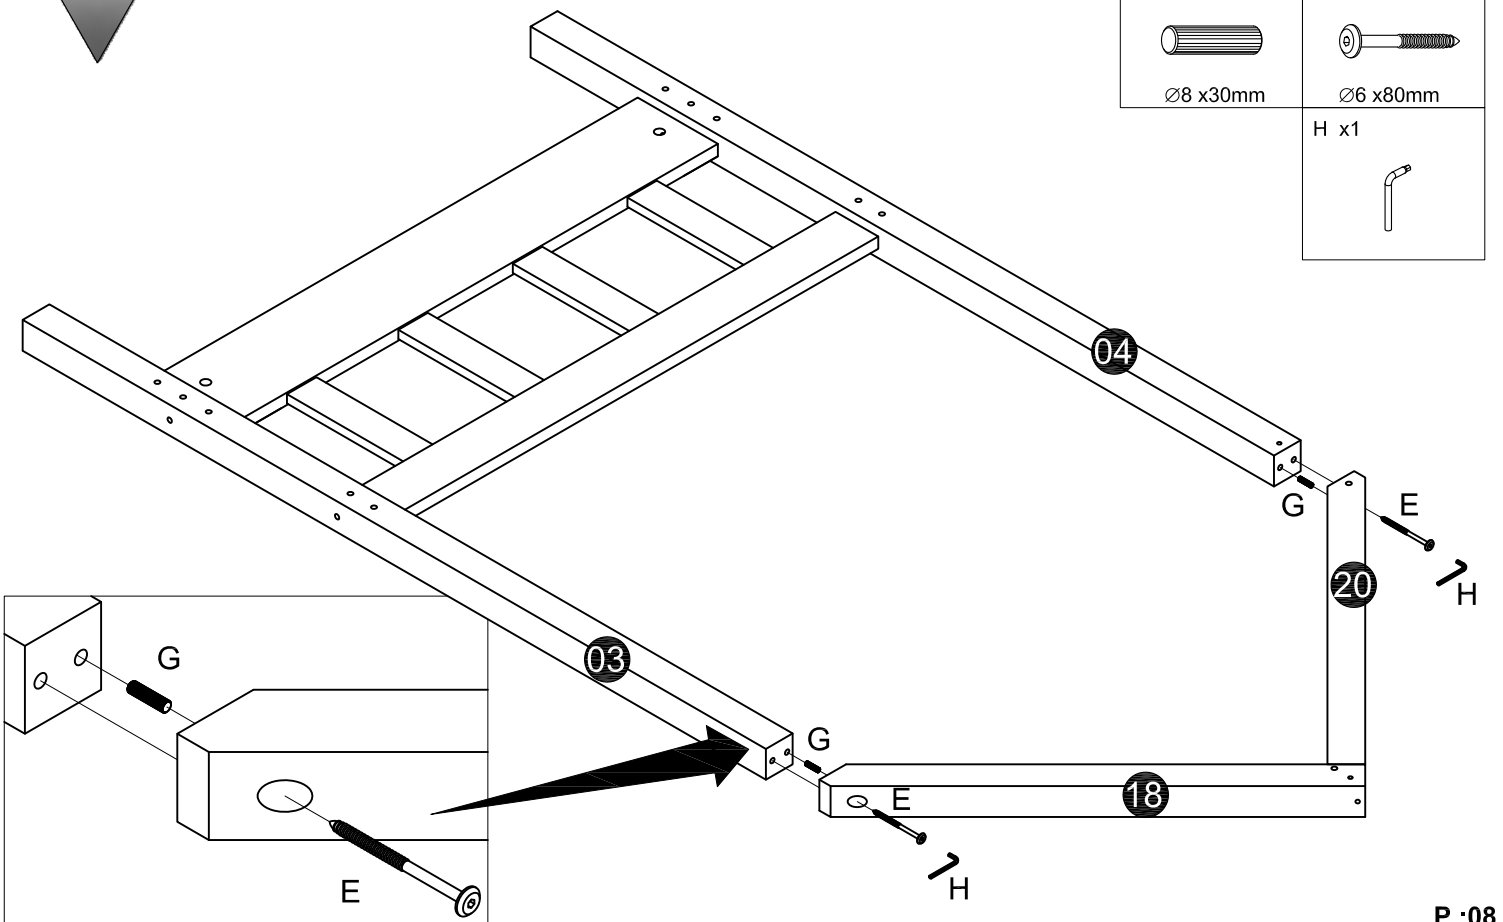

10

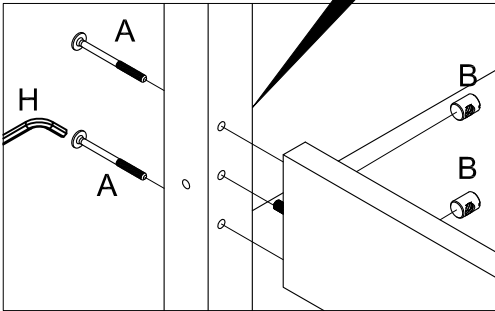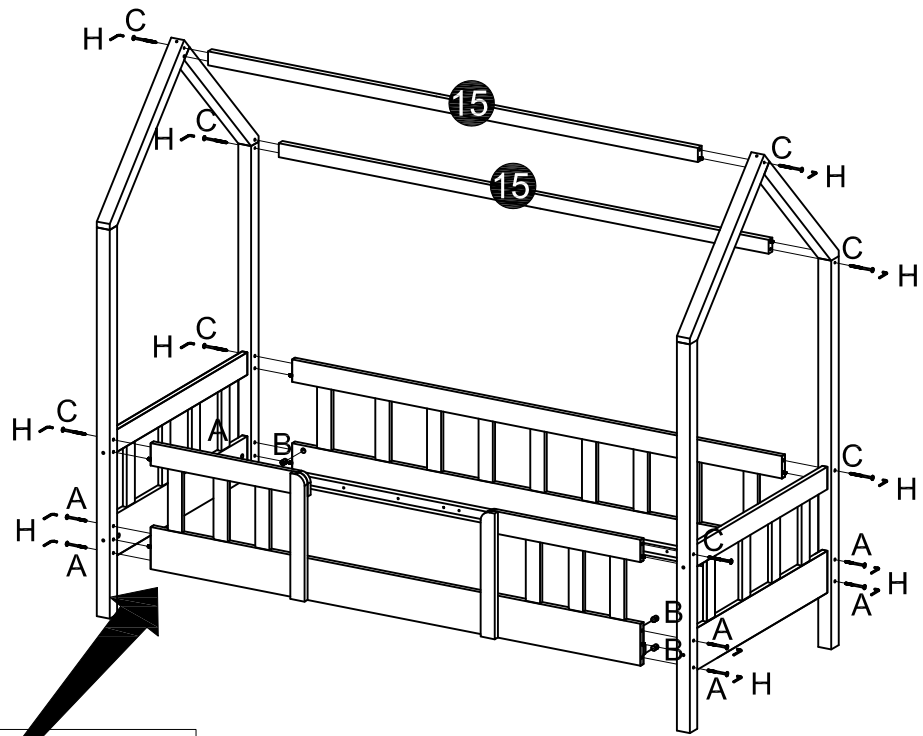



11




C x8	A x8	B x8	H x1
			
Ø6 x90mm	M6 x90mm		

12

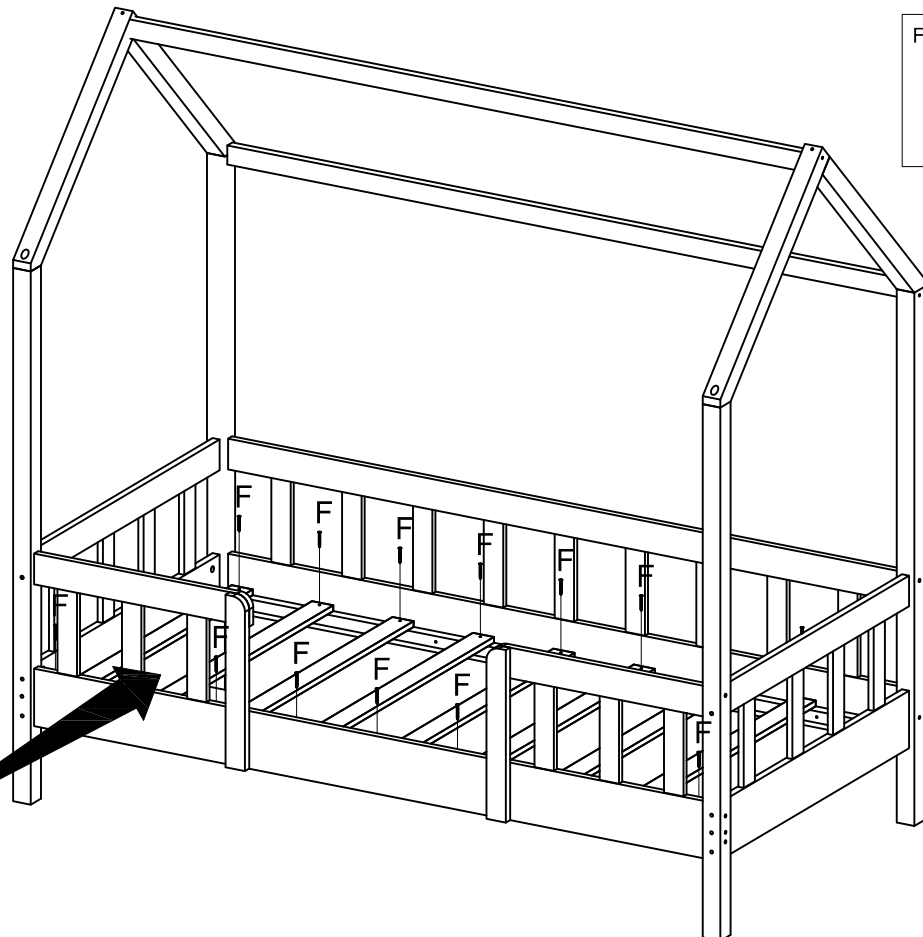

F x18

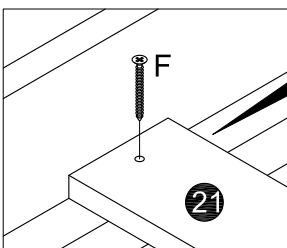Ø4 x30mm



NO HANGING

